

Foller[®]

User's Manual

Multifunctional Steam Cleaner



ST 300

Multifunctional Steam Cleaner

Product description:

Steam cleaner is a new home appliance for health-keeping and house-cleaning with the scientific and unique design, the item can sterilize and disinfect in the steam it produced. It can be used for cleaning bathroom, toilet, glass window, furniture, kitchenware and cars, etc. In addition, it can be used for dry-cleaning the dress. It can efficiently remove both the dirt that can be seen and the bacterial that cannot be seen. It is a good assistant to clean, which is helpful not only for floor and wall, but also for every small nook and corner.

Usage:

- 1.Fill the body with water (please refer to "how to fill the body with water")
- 2.Install the spare parts: choose the suitable parts according to your need (please refer to "how to install and use the spare parts")
- 3.Connecting with the power supply, the indicator is on.
- 4.Use it after 4 minutes or so. Please note not to press the button for long time. As the steam pressure rise again slowly if you do so. It is better for you to press the button discontinuously. Also, do not worry if you feel the steam pressure is becoming low after pressing the button for long time. the only thing you should do is to further press the button for several seconds and then un-press when the steam pressure begin to rise. The steam pressure can restore quickly and become the same as before in 10 seconds.

How to fill the body with water:

- 1.When using it for the first time, please unscrew the safety-lid, insert the funnel and then pour 2 measuring cups of water into the body with Measuring cup & Funnel. (Pay attention: just 2 cups of water can be filled)
- 2.When water should be refilled, press the button to discharge the steam completely, unscrew the



safety-lid slowly and then operate it according to the same way mentioned above.
(Pay attention: the steam button must be pressed until the safety lid is opened.)



Spare Parts

1. Measuring cup
2. Funnel
3. Floor Brush
4. Rubber
5. Groom
6. Bent Nozzle
7. Rag
8. Round Brush
9. Belt
10. Steam Hose
11. Safety lid
12. Steam button
13. Body
14. Power Indicator
15. Power Cable

How to assemble and use the spare parts:

1. Straight Nozzle:

Press the button on the link and put the nozzle on to the link, it is fixed if the button set in the hole on Straight Nozzle.

2. Round Brush and Bent Nozzle:

These spare parts can be applied to either the straight nozzle or the link. It can be used for cleaning the small area, such as the nook and corner of the wall, balcony, window, stairs and sofa etc.

3. Floor brush, Rag, Rubber and Groom:

The Floor Brush can be applied to the hexagonal end. There is a long slot in the Floor Brush in which the Rag, Groom and Rubber can be inserted for cleaning large area such as glass, floor, furniture, sofa and Hi-Fi in the car. In addition, the Groom can be used for dry-cleaning the dress.

4. Hose:

The hexagonal end of the Hose can be connected to the Round brush, Bent Nozzle or Floor Brush, then another end to the Link (Same way as that for the Straight Nozzle)


Caution:

Rated Voltage: AC 220V~240V Rated Frequency: 50 Hz Rated Power: 800 W

1. Cut off the power connection after the usage and before cleaning.
2. Put the body on a flat surface and the body, Spare Parts, Power Cable should not be placed near the hot place.
3. When in no use, unplug. Pay attention: the replacement of the spare parts can be done only after the spare parts cool down.
4. When in use, do not unscrew the safety-lid or aim it at human beings, animals & electrical appliances.
5. Keep it out of reach of children. When no steam out, it indicates no water in the body. If so, unplug immediately and fill with water. Do not use it without water inside.

6. When in use, the outside body is felt warm.
7. Only 2 measured cups of water are allowed to fill with. Another chemical solvent such as deodorant, aromatic, softeners, alcohol or detergent is strictly prohibited.
8. Make sure the voltage is compatible and the link & the hose are unblocked before using.
9. To avoid electric leakage, do not immerse the body and the power cable into water or other liquid. Any improper performance of this item occurs; it should be repaired in the professional Service Center appointed by the manufacturer.
If the power cord is damaged. it must be replaced by the manufacture or its service agent or a similarly qualified person in order to avoid a hazard.
10. Do not open the item during use.
11. Do not use in swimming pools containing Water.
12. Please pour away the rest water after use, refill every time with fresh water.

WARNING: Danger of Scalding!

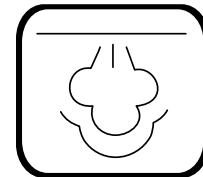

Anti-waterproof class: IPX4

Recognized mark of the steam release

Maintenance:

Be stored in a dry & cool place. After the usage, unplug, release the steam utterly by pressing the button, unscrew the cover slowly, and wait for about 10 seconds to unscrew the cover completely, put the body upside down to drain the water. Only after cool down enough, the spare parts could be touched & cleaned with a wet rag. Everything else can be soaked into water except the body & the power cord. When cleaning, please make the Link, the Hose and the straight nozzle unblocked.

The steam cleaner is used for cleaning and disinfecting to beautify our home



The glass, sofa and the car cleaned by the item make you more comfortable.

The dress dry-cleaned by the item can be kept straight and smooth.

The door and the glass windows cleaned by the item are spotless.

The carpet, mattress, sofa and furniture cleaned by the item keep you away from the bacteria.



روش سرهم‌بندی و استفاده از لوازم جانبی

- ۱- سری صاف: دکمه روی محل اتصال را فشار دهید و سری را به دستگاه متصل کنید.
اگر زبانه دکمه در روزنه سری صاف قرار گیرد، سری در جایش محکم می‌شود.
- ۲- برس دایره‌ای و سری منحنی: این دو وسیله را می‌توان هم به سری صاف و هم به محل اتصال دستگاه، وصل کرد.
آن را می‌توان برای تمیزکاری جاهای کوچک مانند گوشه و کناره‌های دیوار، بالکن، پنجره، راه پله و مبلی راحتی به کار برد.
- ۳- سری ویژه سطوح سخت، پارچه، سری کائوچویی، و سری ویژه آهار:
سری ویژه سطوح سخت را می‌توان به پایانه شش ضلعی متصل کرد. شیار درازی بر روی آن وجود دارد که می‌توان پارچه، سری کائوچویی را در آن فرو برد و برای تمیزکاری سطوح گسترده‌ای مانند شیشه، کف اتاق، مبلمان، صندلی راحتی، و دستگاه صوتی داخل ماشین به کار برد. همچنین از سری ویژه آهار در خشک‌شویی لباس‌ها نیز می‌توان استفاده کرد.
- ۴- شلنگ
انتهای شش وجهی شلنگ را می‌توان به برس دایره‌ای، سری منحنی یا سری ویژه سطوح سخت متصل کرد، سپس سر دیگر آن را به محل اتصال دستگاه وصل کنید.

ولتاژ: برق متناوب ۲۴۰-۲۲۰ ولت
فرکانس: ۵۰ هرتز
توان: ۸۰۰ وات

نگهداری و تمیزکاری

- دستگاه را در مکانی خشک و خنک نگهداری کنید. پس از استفاده، دوشاخه را کشیده با فشردن دکمه، بخار را کاملاً تخلیه نمایید. پوشش را به آرامی باز کنید. ۱۰ ثانیه صبر کنید و سپس پوشش را کاملاً بردارید. بدنه دستگاه را وارونه بگذارید تا آب آن تخلیه شود. تنها پس از خشک‌شدن به اندازه کافی، می‌توانید لوازم جانبی را لمس کنید و با پارچه‌ای نرم تمیز کنید. تمام قطعات دستگاه را به جز بدنه و سیم برق - می‌توان در آب فرو برد. لطفاً هنگام تمیزکاری محل اتصال، شلنگ و سری صاف را مسدود نکنید.
- دستگاه بخارشوی، خانه را پاکیزه نگاه می‌دارد و آن را زیباتر می‌کند.
- شیشه‌ها، مبلی راحتی و فضای داخل اتومبیل با این دستگاه به راحتی تمیز می‌شوند.
 - ظاهر و بافت لباس‌هایی که با این دستگاه تمیز شده‌اند، حفظ می‌شود.
 - در و شیشه پنجره‌ها، پس از تمیزکاری بدون لک می‌مانند.
 - فرش، تشک تخت‌خواب، مبلی راحتی و لوازمی که با این دستگاه تمیز شده‌اند، باکتری‌هایشان از بین رفته است.



توصیف اجزا



- ۱- پیمانه
- ۲- قیف
- ۳- سری ویژه سطوح سخت
- ۴- سری کائوچویی
- ۵- سری ویژه آهار
- ۶- سری منحنی
- ۷- پارچه
- ۸- برس دایره‌ای
- ۹- بند شانه‌انداز
- ۱۰- لوله بخار
- ۱۱- درپوش ایمنی
- ۱۲- دکمه تخلیه بخار
- ۱۳- بدنه
- ۱۴- چراغ نشانگر توان
- ۱۵- سیم برق

روش استفاده

- ۲- دستگاه را از آب پر کنید (لطفاً بخش روش پر کردن آب را ببینید).
- ۳- لوازم جانبی را نصب کنید: با توجه به نیازتان لوازم جانبی مناسب را انتخاب نمایید. (لطفاً بند روش سرهم‌بندی و استفاده از لوازم جانبی را ببینید).
- ۴- دوشاخه را به برق بزنید، چراغ نشانگر روشن می‌شود.
- ۵- دستگاه را پس از حدوداً ۴ دقیقه به کار ببرید. لطفاً دقت کنید که دکمه را به مدت زمانی طولانی نگه ندارید. زیرا در این حالت، فشار بخار دوباره به تدریج زیاد می‌شود. بهتر است که دکمه بخار را به صورت ناپیوسته فشار دهید. اگر احساس کردید که پس از فشردن طولانی مدت دکمه فشار بخار افت می‌کند، نگران نباشید. در این حالت، به مدت چند ثانیه دکمه را بیشتر فشار داده و نگه دارید و به محض این که فشار بخار زیاد شد، دکمه را رها کنید. فشار بخار به سرعت در مدت زمان ۱۰ ثانیه به حالت اولیه بر می‌گردد.

روش پر کردن آب




- ۱- هنگام استفاده از دستگاه برای نخستین بار، درپوش ایمنی را بچرخانید، قیف را در دهانه ورودی قرار دهید و ۲ پیمانه آب در دستگاه بریزید. (توجه کنید: تنها دو پیمانه آب بریزید).
- ۲- اگر می‌خواهید دستگاه را دوباره آب کنید؛ دکمه را فشار دهید تا بخار کاملاً تخلیه گردد، درپوش ایمنی را به آرامی چرخانده، باز کنید و بر طبق روش بالا عمل کنید. (توجه کنید: دکمه بخار می‌باید فشرده باشد تا درپوش ایمنی باز شود).

هشدارهای مهم ایمنی

- پیش از تمیزکاری و پس از استفاده از دستگاه، دوشاخه را از برق بکشید.
- بدنه دستگاه را بر روی سطحی صاف بگذارید. بدنه، لوازم جانبی و سیم برق را در نزدیکی اشیای داغ قرار ندهید.
- هنگامی که از دستگاه استفاده نمی‌کنید، دوشاخه آن را بکشید. دقت کنید که تنها پس خنک‌شدن لوازم جانبی، آنها را از دستگاه جدا نمایید.
- هنگام عملکرد دستگاه، درپوش ایمنی را باز نکنید. دستگاه را به سمت افراد و جانوران و دستگاه‌های برقی نشانه نروید.
- دستگاه را از دسترس کودکان دور نگه دارید. اگر بخاری از آن خارج نمی‌شود نشانه آن است که آب درون مخزن تمام شده است. در این حالت، فوراً دوشاخه را از برق کشیده و دستگاه را از آب پر کنید. دستگاه را بدون آب به کار نیندازید.
- هنگام عملکرد بدنه دستگاه گرم می‌شود.
- تنها می‌توان ۲ پیمانه آب در دستگاه ریخت. از ریختن محلول‌های شیمیایی مانند عطرمایه‌ها، نرم‌کننده‌ها، الکل یا مواد شوینده در آن بپرهیزید.
- پیش از استفاده، از یکی بودن ولتاژ دستگاه با ولتاژ برق منزل تان مطمئن شوید و نیز از مسدود نبودن محل اتصال یا شلنگ اطمینان یابید.
- برای پرهیز از برق‌گرفتگی، بدنه و سیم برق را در آب یا هرگونه مایع دیگری فرو نبرید. در صورت عملکرد نامناسب دستگاه، آن را به مرکز خدمات پس از فروشی که مورد تأیید سازنده است، تحویل دهید تا برای تان تعمیر کنند.
- اگر سیم برق دستگاه آسیب دیده بود، برای پرهیز از خطر آن را به سازنده، مرکز خدمات پس‌ازفروش یا تعمیرکاری ماهر تحویل دهید تا برای تان تعویض نماید.
- از دستگاه برای تمیزکاری استخری که محتوی آب است، استفاده نکنید.
- لطفاً پس از استفاده، آب مانده را دور بریزید. هر بار دستگاه را از آب تازه پر کنید.

هشدار (خطر سوختگی)

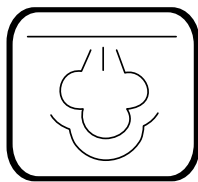

دستگاه بخارشوی، وسیله‌ای جدید برای حفظ سلامت و تمیزکاری منزل است که طراحی‌ای منحصر به فرد و مبتنی بر اصول علمی دارد. بخار این دستگاه سبب استریلیزه‌شدن و گندزدایی می‌شود. از این دستگاه می‌توان برای تمیزکاری حمام، توالت، پنجره، لوازم منزل، لوازم آشپزخانه و اتومبیل و ... همچنین برای تمیزکاری لباس نیز استفاده کرد.

این دستگاه هم کثیفی‌های قابل مشاهده و هم باکتری‌های نامرئی را می‌زداید و دستیاری خوب در امر تمیزکاری است و نه تنها برای پاکیزه نگه‌داشتن کف و دیوارها مناسب است، بلکه هر گوشه و کناری را که دسترسی به آن دشوار است، تمیز می‌کند.

Feller®

دفتريچه راهنمای

بخارشوی
چند منظوره



ST 300

**Multifunctional
Steam Cleaner**